

1. INSTALLATION

- A. Remove bin from the top of the unit.



- B. Install the angled buffer to the top of the unit by sliding the buffer to the back of the unit.

Angled Buffer



Lancer Corp., 6655 Lancer Blvd., San Antonio, Texas 78219

800-729-1500 - Technical Support/Warranty: 800-729-1550

custserv@lancercorp.com - lancercorp.com

Manual PN: 28-2845 - NOVEMBER 2014

"Lancer" is the registered trademark of Lancer © 2014 by Lancer, all rights reserved.

CONTINUED ON NEXT PAGE.....

- C. Install adapter plate over the angled buffer, noting the open notches in the adapter plate sliding over the two manual fill zones in the front of the unit.

Adapter Plate




- D. Install the handles of the two front covers using the screws provided.
- E. Loosen the two thumb screws toward the front of the unit, in front of the open manual fill zones.
- NOTE: DO NOT** fully remove thumb screws.
- F. Once thumb screws are loosened, slide cover plate over opening and tighten screws to secure in place.

Cover Plate

Cover Handle

Thumb Screws

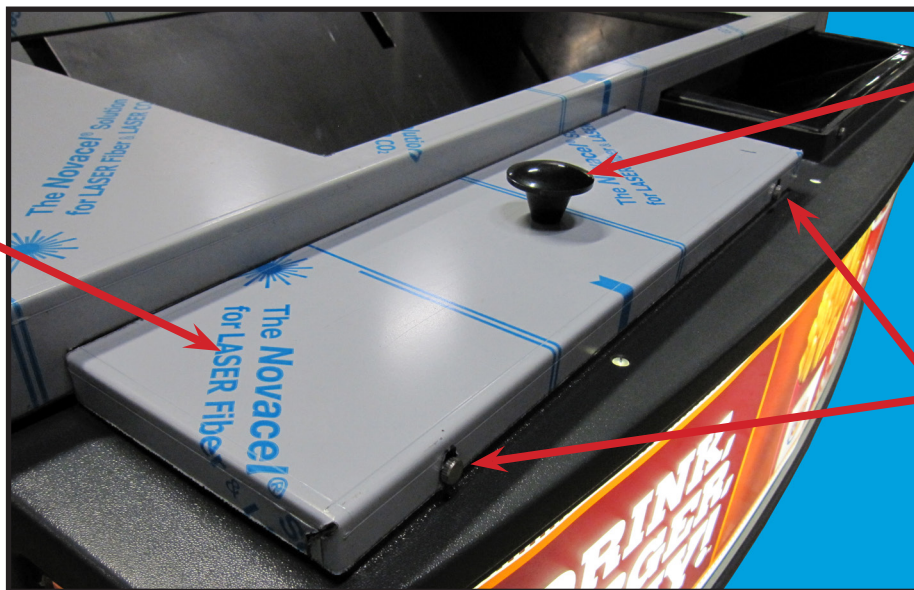

- G. Repeat Steps E-F for the second cover opening.