INSTALLATION INSTRUCTIONS KIT INSTALLATION, 8 VALVE, FIGAL

1. INSTALLATION PROCEDURES

- **1.1** The accompanying diagram (see reverse) demonstrates a typical installation for a eight-flavor dispenser using eight (8) figals as the syrup sources.
- **1.2** It is VERY IMPORTANT to make sure that the Regulator adjustment screws are threaded completely out before installation. This ensures that CO₂ gas does not pass uncontrolled through the Regulator assembly during connection.

NOTES:

If it is preferred that Diet syrups be regulated at a lower CO₂ pressure than non-diet syrups, the setup can be adjusted. Simply run a 3/8 inch loop from one barb connection to the other barb connection on the manifold of one of the secondary regulators (labeled as component #2 in the accompanying diagram). Then hook up the 1/4 inch flare connection from the secondary regulator to the figal containing the diet syrup.

Start-up and operating instructions for the dispenser and carbonator are included in the respective manuals for each piece of equipment.

For Cold-Carbonated Dispensers, the lines and fittings for the carbonators are not necessary. Simply hook up the water line to the dispenser.




NORTH AMERICA – 210-310-7245 • INTERNATIONAL SALES – 210-310-7242 • CUSTOMER SERVICE – 210-310-7242 • • LATIN AMERICA – 210-310-7245 • EUROPE – 32-2-755-2399 • PACIFIC – 61-8-8268-1978 •

> FAX ENGINEERING: • 210-310-7096 "Lancer" is the registered trademark of Lancer • Copyright — 1998 by Lancer, all rights reserved.

DATE: 08/27/98

28-0402

P.N.:

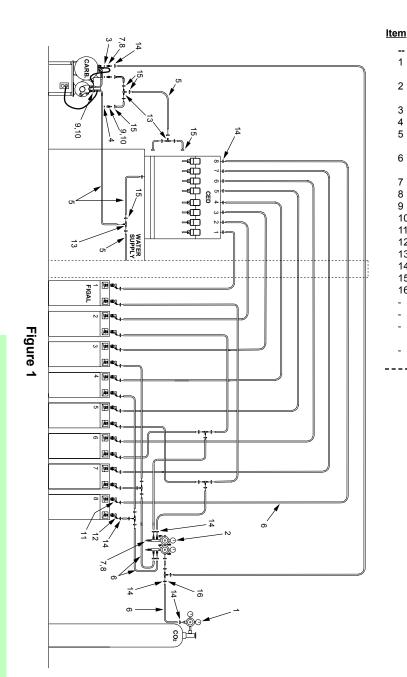

tem	Part No.	Description	Quantity	<u>ltem</u>	Part No.	Description	Quantity
	82-0221-08	Kit, Installation			82-0221-08C	Kit, Installation	
1	18-0048/01	Regulator Assy,	1	1	18-0048-02/01	Regulator Assy, Tank	1
		Tank Mount				Mount, Cornelius	
2	18-0108/01	Regulator Assy,	1	2	18-0108-02/01	Regulator Assy, Wall	1
		Wall Mount	1			Mount, Cornelius	
3	05-0011	Flare Seal, 1/4 Inch	8	3	05-0011	Flare Seal, 1/4 Inch	8
4	05-0017	Flare Seal, 3/8 Inch	12	4	05-0017	Flare Seal, 3/8 Inch	12
5	08-0351	Tubing, 3/8 Inch	AR	5	08-0351	Tubing, 3/8 Inch	AR
		With Line (20 Feet)				With Line (20 Feet)	
6	08-0349	Tubing, 1/4 Inch	AR	6	08-0349	Tubing, 1/4 Inch	AR
		With Line (100 Feet)				With Line (100 Feet)	
7	01-0221	Stem	4	7	01-0221	Stem	4
8	01-0222	Nut, Swivel, 7/16 - 20	4	8	01-0222	Nut, Swivel, 7/16 - 20	4
9	01-0232	Nut, Swivel, 5/8 - 18	6	9	01-0232	Nut, Swivel, 5/8 - 18	6
10	01-0234	Stem	6	10	01-0234	Stem	6
11	17-0018	Disconnect, Liquid	8	11	17-0018	Disconnect, Liquid	8
12	17-0017	Disconnect, Gas	8	12	17-0017	Disconnect, Gas	8
13	01-0525	Tee, 3/8 Inch, Barb, SS	S 2	13	01-0525	Tee, 3/8 Inch, Barb, SS	52
14	07-0433	Clamp, 1/4 Inch	55	14	07-0433	Clamp, 1/4 Inch	55
15	07-0438	Clamp, 3/8 Inch	14	15	07-0438	Clamp, 3/8 Inch	14
16	01-1280	Tee, 1/4 Inch, Barb, SS	S 5	16	01-1280	Tee, 1/4 Inch, Barb, SS	5 5
-	81-0418	Cap, Flare, 1/4 Inch	2	-	81-0418	Cap, Flare, 1/4 Inch	2
-	01-0212	Cap, Flare,3/8 Inch	1	-	01-0212	Cap, Flare, 3/8 Inch	1
-	01-0594	Hose Stem,	8	-	01-0594	Hose Stem,	8
		1/4 Barb x 3/8 Barb				1/4 Barb x 3/8 Barb	
-	22-0016	Wrench, CO2	1	-	22-0016	Wrench, CO2	1

Item	Part No.	Description	Quantity
	82-2613-08	Kit, Installation	
1	18-0048/01	Regulator Assy, Tank Mount	1
2	18-0108/01	Regulator Assy, Wall Mount	1
3	05-0011	Flare Seal, 1/4 Inch	8
4	05-0017	Flare Seal, 3/8 Inch	12
5	08-0351	Tubing, 3/8 Inch With Line (100 Feet)	AR
6	08-0349	Tubing, 1/4 Inch With Line (20 Feet)	AR
7	01-0221	Stem	4
8	01-0222	Nut, Swivel, 7/16 - 20	4
9	01-0232	Nut, Swivel, 5/8 - 18	6
10	01-0234	Stem	6
11	17-0020	Disconnect, Liquid, 3/8	8
12	17-0017	Disconnect, Gas	8
13	01-0525	Tee, 3/8 Inch, Barb, SS	52
14	07-0433	Clamp, 1/4 Inch	27
15	07-0438	Clamp, 3/8 Inch	38
16	01-1280	Tee, 1/4 Inch, Barb, SS	
-	81-0418	Cap, Flare,1/4 Inch	2
-	01-0212	Cap, Flare,3/8 Inch	1
-	22-0016	Wrench, CO2	1

Ν

LANCER

Please refer to the Lancer web site (www.lancercorp.com) for information relating to Lancer Installation and Service Manuals, Instruction Sheets, Technical Bulletins, Service Bulletins, etc.