


The following illustrates the steps necessary to install the new plumbing assembly and increase the carbonation levels on the Lancer Bridge Tower.

Contents - Plumbing Assembly PN: 49-0351

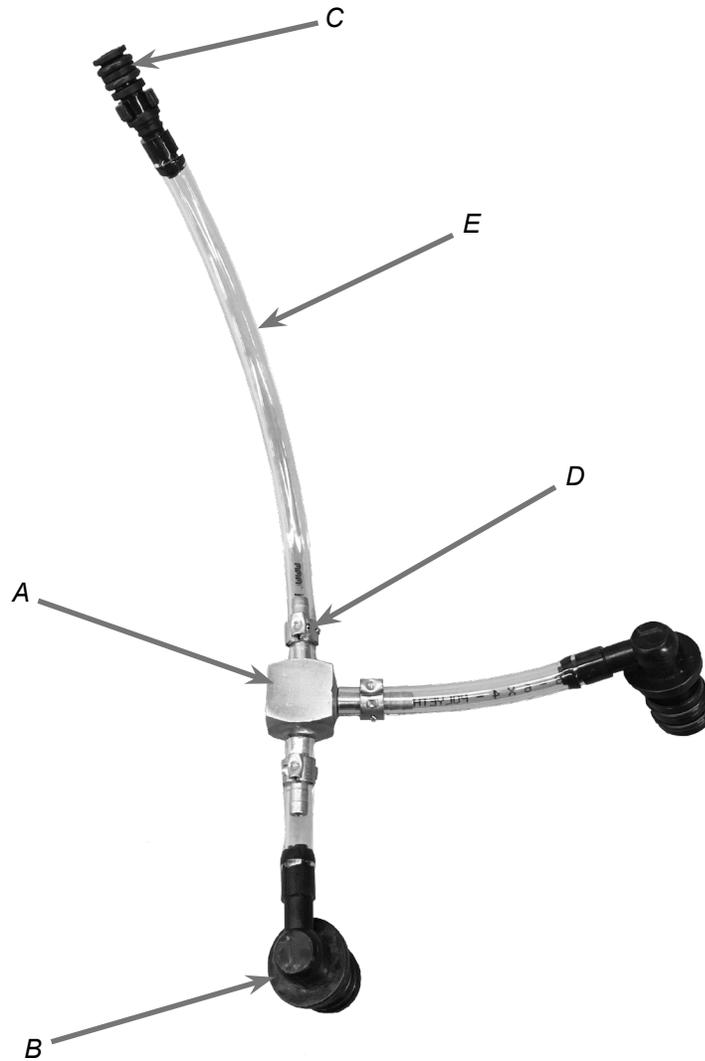


- A. Tee
- B. Elbow fitting w/ O-rings
- C. Water inlet fitting w/ O-rings
- D. Hose clamps
- E. Tubing

If a complete Operations Manual is required, please refer to the Lancer web site (lancercorp.com) or for your convenience, scan this QR code with a mobile device (app required) for immediate access. Contact Lancer Customer Service if any assistance is required.



Removing Old Plumbing Assembly


1. Power down the unit.
2. Remove the cup rest and splash plate.

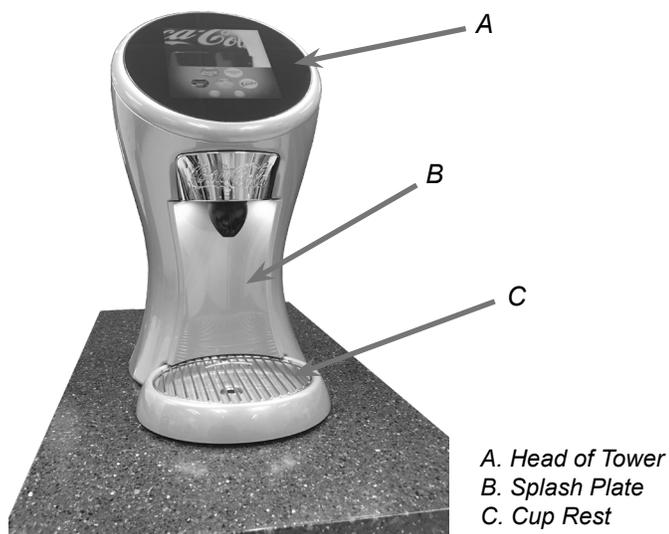

3. Twist the key-lock rod, located behind the splash plate, to unlock the head of the tower.
4. Once unlocked, lift the head of the tower all the way then lock the head of the tower in place by using the kick stand next to the tower hinges.
5. Access the nozzle component located under the touch screen.
6. Unscrew and remove the water inlet fitting located in the center of the nozzle. Keep the screw for use later.




7. Unclip the plumbing from the plain and carbonated water valves.

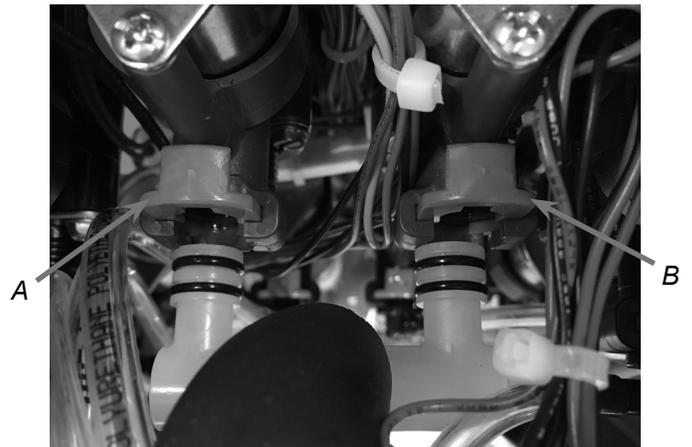

A. Carb Water Clip
B. Plain Water Clip

8. Remove the plain and carbonated water plumbing from the access panel behind the splash plate.

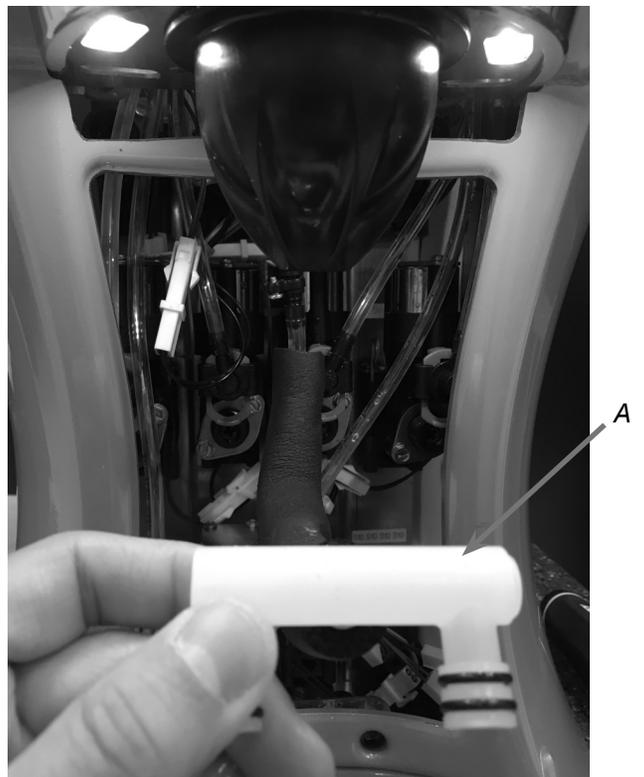

A. Plain/Carb Water Fitting

Installing New Plumbing Assembly

1. Insert the new plumbing through the access panel behind the splash plate.

NOTE

Ensure the elbows of the assembly are facing the unit when inserting into panel.

2. Insert the short tube into the carbonated water valve (left side).
3. Insert the long tube into the plain water valve (right side).




A. Plain/Carb Water Fitting

4. Route the water inlet fitting under the brace in the nozzle compartment.




A. Water Inlet
B. Nozzle Brace

5. Clip the valve retainers to secure the plumbing fittings.

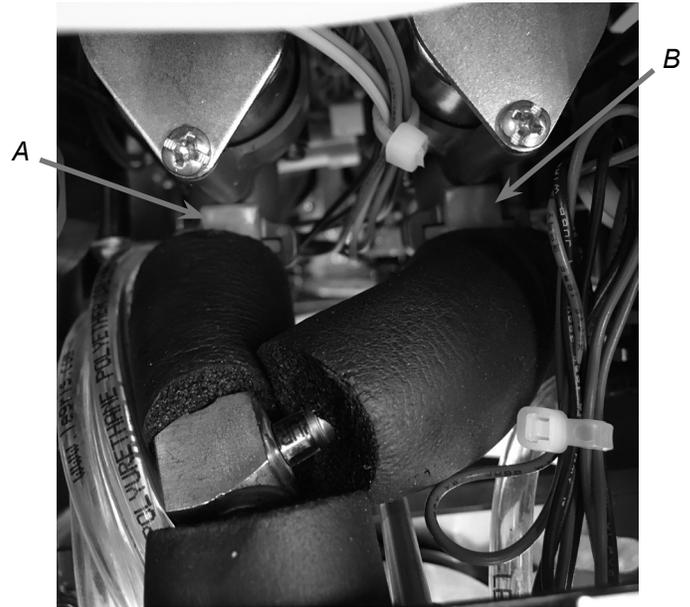

A. Carb Water Clip
B. Plain Water Clip

6. Insert the water inlet fitting into the nozzle and secure it with the screw removed in previous section.

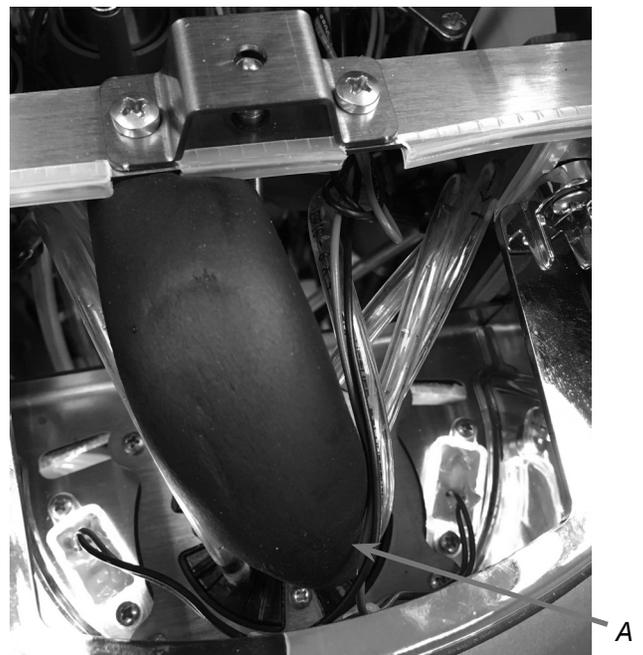

A. Water Inlet In Nozzle

⚠ ATTENTION

DO NOT overtighten screw when connecting the water inlet fitting.

Lancer Corp., 6655 Lancer Blvd., San Antonio, Texas 78219

800-729-1500 - Technical Support/Warranty: 800-729-1550

custserv@lancercorp.com - lancercorp.com

Manual PN: 28-0965 - April 2016

"Lancer" is the registered trademark of Lancer © 2016 by Lancer, all rights reserved.