

Bridge Tower Water Buttons Update

Instruction Sheet

PN 28-0993

The following illustrates how to upload custom water button graphics and use the new Larger Water Button feature for Bridge Tower units.

Uploading Custom Water Button Graphics

NOTE -

For more information on the Tower Brand Management Software, see the *Tower Brand Management Software Instruction Sheet* (Lancer PN: 28-2855) which can be found on the Lancer Corp website or by scanning the QR code located on the unit's name plate label behind the splash plate.

- 1. The first step to uploading custom water button graphics will be to create a new .brand file with the new water button graphics.
- 2. Open the *Tower Brand Management Software* and create a new *Bridge v1 Brand File*.
- 3. Add a new brand to the brand/flavor tree by clicking *Brands* in the menu bar and selecting *New*.
- 4. Fill in the proper Unique ID for the new brand. For carbonated water buttons use id "builtin-soda" and for plain water buttons use id "builtin-water".

NOTE

The Unique ID must be "builtin-soda" for carbonated water and "builtin-water" for plain water. If the Unique ID in the brand file is different then the upload will not work

- 5. For plain water buttons, click the *Non-carb* checkbox. For carbonated water buttons leave the *Non-carb* checkbox "blank".
- 6. Add the appropriate *button, panel bottom, panel top,* and *gradient* graphics to the brand tree.


NOTE -

For more information on the Bridge Tower brand graphics, see the *Bridge Tower Brand Image Specifications Instruction Sheet* (Lancer PN: 28-0956) which can be found on the Lancer Corp website or by scanning the QR code located on the unit's name plate label behind the splash plate.

7. Save the *.brand* water button file to a USB drive containing the existing brand files of all the current brands on the unit.

NOTE

Any brand files uploaded to unit will replace any brand files on the unit. For more information on uploading brand files to the Bridge Tower, see the *Bridge Tower Data Import Instruction Sheet* (Lancer PN: 28-0957) which can be found on the Lancer Corp website or by scanning the QR code located on the unit's name plate label behind the splash plate.

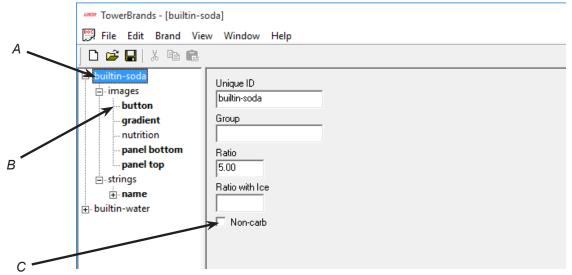

- A. Unique ID
- B. Add Custom Graphics
- C. Non-carb Checkbox

Lancer Corp., 6655 Lancer Blvd., San Antonio, Texas 78219 - 800-729-1500 - Technical Support/Warranty: 800-729-1550 custserv@lancercorp.com - lancercorp.com - Manual PN: 28-0993 - March 2017

"Lancer" is the registered trademark of Lancer © 2017 by Lancer, all rights reserved.

Larger Water Buttons Feature

- 1. To increase the size of the water buttons on the pour screen, first access the Service Menu.
- In one swift, fluid motion slide your finger along the top of the screen to the left till you reach the upper left corner of the screen, then hold your finger to the screen for a minimum of two (2) seconds.



- Slide Finger to Left and Hold

3. After you have held your finger to the upper left corner for a minimum of two (2) seconds, tap all four corners of the screen in any order.




- Tap Four Corners of Screen

4. A keypad will appear, enter the designated pin number to access the service menu.

NOTE -

Contact Lancer Technical Support for the units' designated pin number.

- 5. Press the *System* button located on the right side column.
- 6. Press the *Enabled* button under the "Larger water buttons" heading.

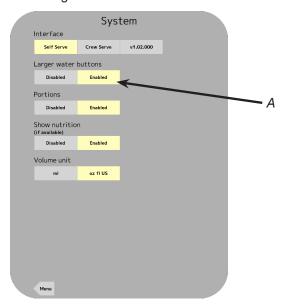

A. Larger Water Buttons

- 7. Press Menu, then Save Settings and Exit.
- 8. The water buttons on the pour screen will now be approximately 40% larger in area.
- 9. Repeat steps 2-3 and press *Disable* to return the water buttons to their default size.



- Larger Water Button Size