

TOOLS/PARTS REQUIRED

- Phillips Screwdriver
- Needle-nose Pliers

INSTALL TIME

- 30-45 minutes per unit

BEFORE GETTING STARTED

- A. Disconnect power from the dispenser, by unplugging the dispenser.




ALWAYS DISCONNECT POWER FROM UNIT PRIOR TO SERVICING OR CLEANING.

- B. Remove the drip tray (if applicable), splash plate or extended splash plate, as needed.


- C. Remove Merchandiser by removing the two (2) screws (use a Phillips Screwdriver) on the Faucet Plate that hold the merchandiser in place (red circles, Fig 1).

FIG 1

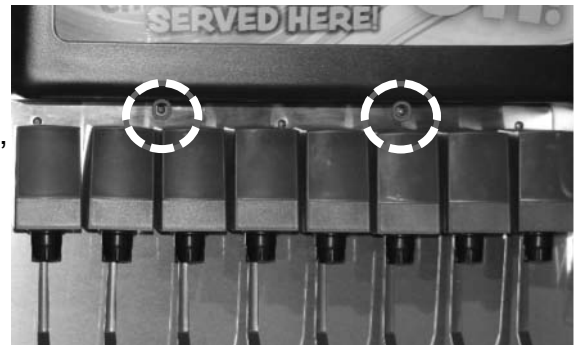


- D. Use a Phillips Screwdriver to remove the Auger Motor Shaft Cover from the Auger Motor gear head (Fig 2).

FIG 2

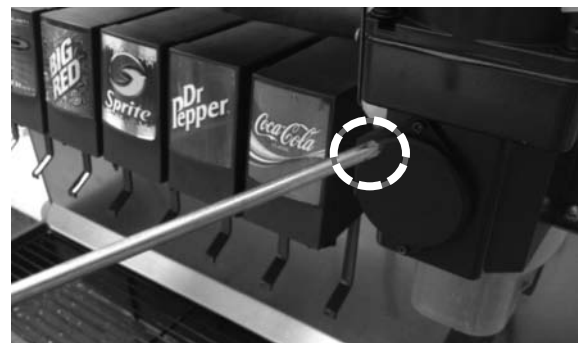

- E. Remove the Clip from Auger Motor Shaft (Fig 3).


FIG 3

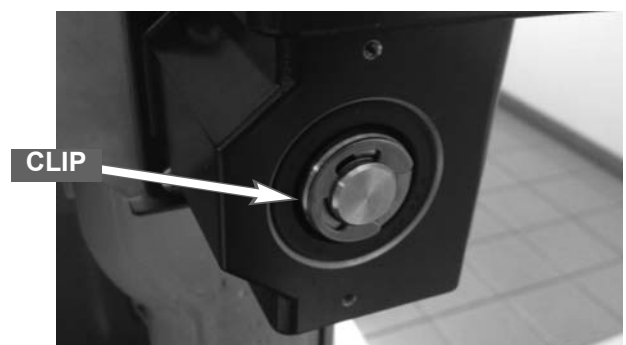


CONTINUED ON NEXT PAGE

- F. Ensure the Motor Wire Harness is disconnected (Fig 4a). Retain the Auger Shaft Key.


MOTOR WIRE
HARNESS

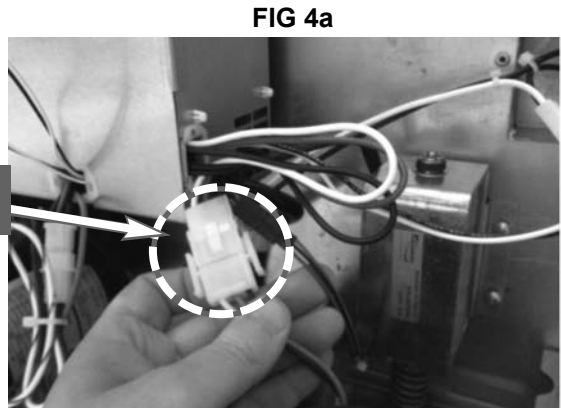

Remove four (4) screws from bracket holding the Auger Motor (red circles, Fig 4b). NOTE: Two (2) screws are not shown in the image).

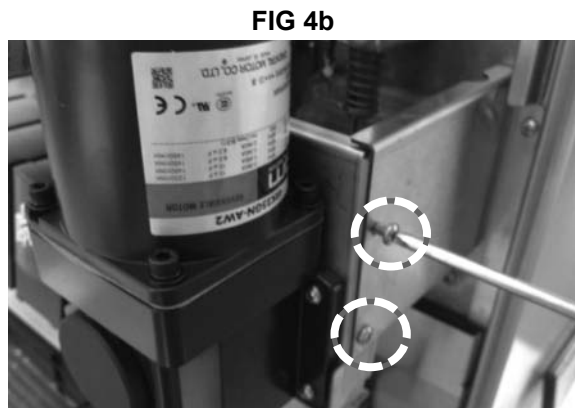


Slide the Motor and Mounting Plate Assembly off the Auger Shaft (Fig 4c).

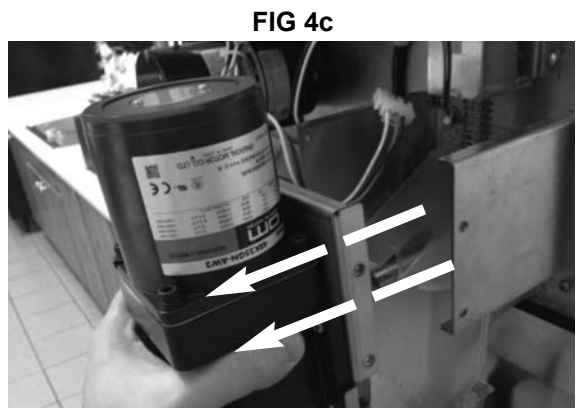

- G. Remove the key from the Shaft (Fig 5).


- H. Remove the second clip from the Auger Shaft.

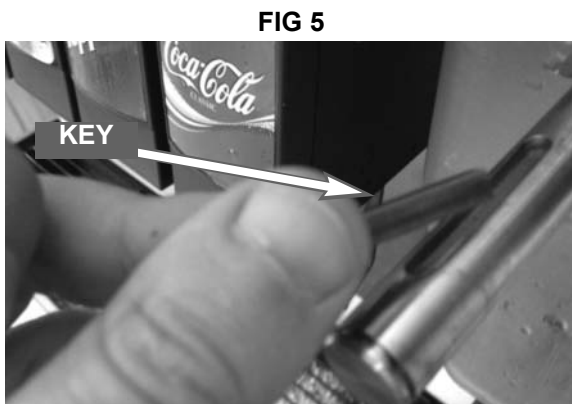

CONTINUED ON NEXT PAGE


- I. Disconnect the Ice Chute Sensor Wire Harness (Fig 6).

FIG 6

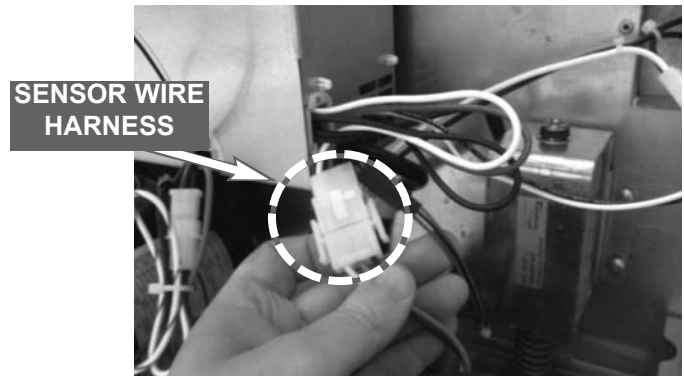

- J. Disconnect the solenoid from the linkage by pushing the pin through the Shaft until the linkage is free. NOTE: Fig 7 displays the pin disengaged.

FIG 7

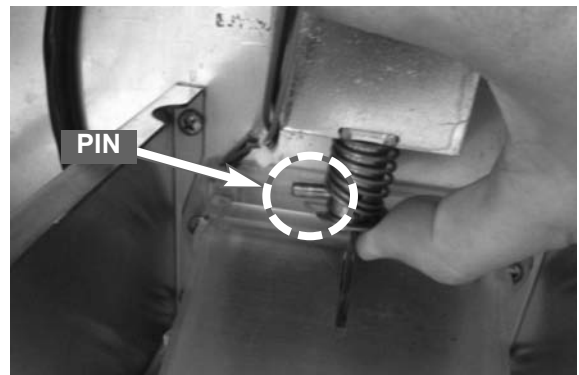

- K. Remove the old Ice Chute Assembly by removing the four (4) screws (red circles, Fig 8) that secure it to the unit.

FIG 8



- L. Remove the old Auger by pulling it straight out of the unit (Fig 9).

FIG 9



CONTINUED ON NEXT PAGE

- M. Install the new Auger. Verify the back end of the Shaft is engaged in the bearing located at the rear of the unit (Fig 10). The Auger Motor cannot be installed if the Shaft is not properly seated.

FIG 10



- N. Install new o-ring in the new Ice Chute Assembly.

- O. Install the new Ice Chute assembly. Before tightening the screws, verify that the o-ring is properly seated and not protruding into the dispensing area. The screws holding the Ice Chute only need to be snug. Over-tightening can deform or break the Ice Chute.

- P. Reconnect the Ice Chute linkage to the Solenoid.

FIG 11




- Q. Remove the Ice Chute Lever from the old Ice Chute by rotating it forward and detaching it from the Ice Chute. Install the Lever on the new Ice Chute (Fig 11).

- R. Reinstall the Shaft Clip closest to the Ice Chute.

- S. Reinstall the Auger Motor. Be sure to place the Shaft key in the keyway prior to sliding the Motor over the Shaft.

- T. Reinstall the other Shaft clip and the Shaft cover. If the groove for the clip is not visible, the Shaft can be moved by pushing on the Shaft Clip between the Motor and the Ice Chute (Fig 12).

FIG 12

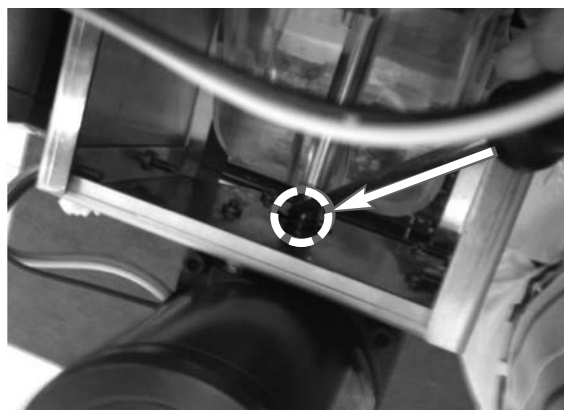

- U. Reconnect the Ice Chute Sensor Wire Harness (Fig 6).

- V. Reconnect the Motor Wire Harness (Fig 4a).

- W. Reinstall merchandiser.

- X. Reconnect power to the dispenser and verify operation.