

Important Notice

When installing an icemaker on an IBD unit, a bin thermostat or other means of controlling the ice level must be installed. Failure to do so could result in damage to the dispensing mechanism and void the warranty.

During the automatic agitation cycle and/or while dispensing ice, there must be adequate room between the top of the ice level and the bottom of the icemaker so that the ice can move without obstruction.

Contact your icemaker supplier for information on proper bin thermostat.

28-0561

Important Notice

When installing an icemaker on an IBD unit, a bin thermostat or other means of controlling the ice level must be installed. Failure to do so could result in damage to the dispensing mechanism and void the warranty.

During the automatic agitation cycle and/or while dispensing ice, there must be adequate room between the top of the ice level and the bottom of the icemaker so that the ice can move without obstruction.

Contact your icemaker supplier for information on proper bin thermostat.

28-0561