PLUMBING INSTRUCTIONS SERIES 500 FOUR (4) VALVE CED WITH CHILLED/AMBIENT CONFIGURATION

This unit has been plumbed from the factory to accommodate two chilled products on Valves 1 and 2, and two ambient products on Valves 3 and 4. Follow these instructions, along with those in the Installation and Service Manual, to complete the unit installation.

<u>NOTE</u>

Do not connect the Water Inlet on the right side of the unit to a water supply unless Valves 3 and 4 have been reconfigured to use chilled water.

- 1. Chilled Product and Water Connections (Valves 1 and 2):
 - **1.1** Using proper beverage tubing and fittings, connect water source to Inlet on left side of unit marked "Soda".
 - **1.2** Connect product supply lines to Syrup Inlets marked "S1" and "S2".
- 2. Ambient Product and Water Connections (Valves 3 and 4):
 - **2.1** Using proper beverage tubing and fittings, connect water source to the left "J-Tube" of Valve 3 and 4.
 - **2.1** Connect product supply lines to the right "J-Tube" of each valve.
- 3. Continue installation per instructions in the Manual.

PLUMBING INSTRUCTIONS SERIES 500 FOUR (4) VALVE CED WITH CHILLED/AMBIENT CONFIGURATION

This unit has been plumbed from the factory to accommodate two chilled products on Valves 1 and 2, and two ambient products on Valves 3 and 4. Follow these instructions, along with those in the Installation and Service Manual, to complete the unit installation.

NOTE

Do not connect the Water Inlet on the right side of the unit to a water supply unless Valves 3 and 4 have been reconfigured to use chilled water.

- 1. Chilled Product and Water Connections (Valves 1 and 2):
 - **1.1** Using proper beverage tubing and fittings, connect water source to Inlet on left side of unit marked "Soda".
 - **1.2** Connect product supply lines to Syrup Inlets marked "S1" and "S2".
- 2. Ambient Product and Water Connections (Valves 3 and 4):
 - **2.1** Using proper beverage tubing and fittings, connect water source to the left "J-Tube" of Valve 3 and 4.
 - 2.1 Connect product supply lines to the right "J-Tube" of each valve.
- 3. Continue installation per instructions in the Manual.



 
6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000

FAX SALES

• NORTH AMERICA – 210-310-7245 • INTERNATIONAL SALES – 210-310-7242 •
• CUSTOMER SERVICE – 210-310-7242 • LATIN AMERICA – 210-524-9567 / 210-310-7245 •
• EUROPE – 32-2-755-2399 • PACIFIC – 61-8-8268-1978 •

FAX ENGINEERING: • 210-310-7096

"Lancer" is the registered trademark of Lancer • Copyright - 1997 by Lancer, all rights reserved.





6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000

FAX SALES

• NORTH AMERICA – 210-310-7245 • INTERNATIONAL SALES – 210-310-7242 •
• CUSTOMER SERVICE – 210-310-7242 • LATIN AMERICA – 210-524-9567 / 210-310-7245 •
• EUROPE – 32-2-755-2399 • PACIFIC – 61-8-8268-1978 •

FAX ENGINEERING: • 210-310-7096

"Lancer" is the registered trademark of Lancer • Copyright - 1997 by Lancer, all rights reserved.

