## LANCER.

## **Flavor Select Power Supply**

The following illustrates how to replace the existing Flavor Select power supply with a new power supply.

## Removal/Installation

- 1. Unplug the unit and remove merchandiser.
- 2. Remove the existing power supply from the unit control box.



3. Cut the existing power cord and remove from unit.



4. Re-route new power cord through carb motor and faucet plate.




5. Route power cord through LFCV valves.



6. Insert the power cord splice into power supply.



7. Connect the power supply connectors (black & white) to the unit control board. (See below)

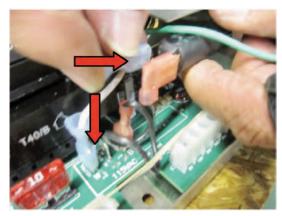

CONTINUED ON NEXT PAGE LANCER PN: 28-0812/01 8. Secure the ground wire (green) to unit with 11-32 SS hex nut.



9. Insert bushing with cord into the power supply.



10. Re-install power supply to unit.



11. Connect all harnesses back to power supply.



12. Re-route excess power cord slack.



13. Install power supply cover and merchandiser.

