# INSTALLATION INSTRUCTIONS **SELF-SERVE LEVER CONVERSION**


## **CCUSA Item #22795** Conversion Kit (P.N. 82-1206/02) includes: One (1) per

- (1) 05-0935/01 Plug, Cherry Switch (A)
- (1) 03-0081 **Cup Lever Spring** (B)
- (1) 05-0776/01 Self-Serve Lever (C)
- (1) 28-0124/04 Instruction Sheet


Notes: All parts in Kit may not be needed

· See reverse for Instructions on Conversion from Pushbutton to Self-Serve Lever


### **CONVERSION FROM ELECTRIC LEVER TO SELF-SERVE LEVER:**

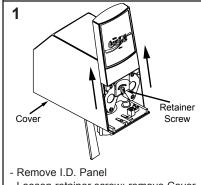

- Loosen retainer screw; remove Cover

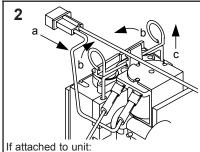


- Disconnect wire harness (a)
- Close Valve stems (b)
- Lift Retainer and remove Valve (c)

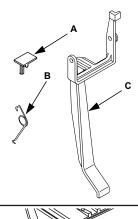





3

- pulling down (a)
- Remove Diffuser Assembly by pulling
- Remove Soda Lever (if applicable)

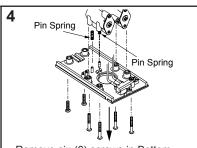


- Remove six (6) screws in Bottom Plate
- Carefully remove Bottom Plate to assure pin springs are not lost

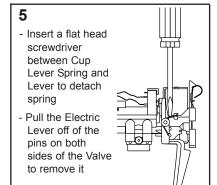

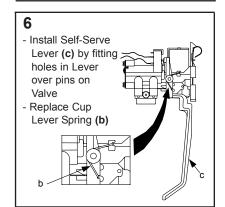

- Replace Bottom Plate and screws assuring the replacement of the pin springs
- If equipped with Soda Lever, replace with Front Soda Lever Kit (CCUSA Item #23430, Lancer PN 82-1458/01-SP)
- Install Diffuser Assembly & Nozzle
- Install Valve on Mounting Block & latch Retainer
- Reconnect wire harness
- Turn both Valve stems to open position
- Check for leaks
- Install Cover & tighten retainer screw
- Install I.D. Panel

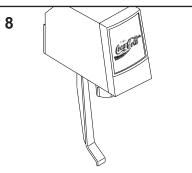

Ensure proper operation of Self-Serve Lever

Check out the Lancer web site: www.lancercorp.com



6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000

### **FAX SALES**


USA -CANADA - 210-310-7250 • LATIN AMERICA - 210-310-7245 • ASIA - 210-310-7242 EUROPE - 32-2-755-2399 • PACIFIC - 61-8-8268-1978


FAX ENGINEERING: • 210-310-7096


"Lancer" is the registered trademark of Lancer • Copyright — 2001 by Lancer, all rights reserved.

DATE: 10/15/01 P.N.: 28-0124/04


### CONVERSION FROM PUSH BUTTON TO SELF-SERVE LEVER:

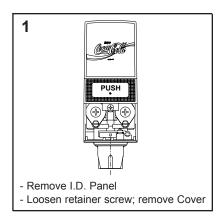

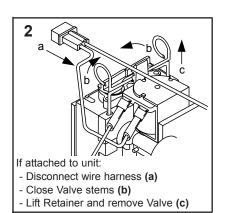


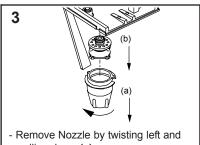



- pulling down (a)
- Remove Diffuser Assembly by pulling down (b)
- Remove Soda Lever (if applicable)

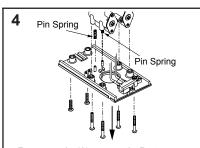



- Remove six (6) screws in Bottom Plate
- Carefully remove Bottom Plate to assure pin springs are not lost

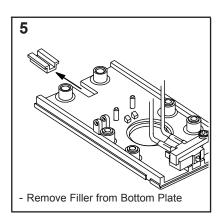


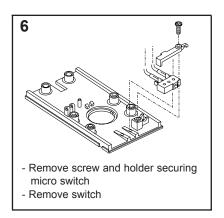

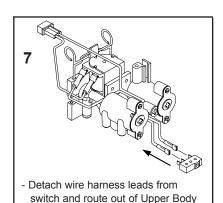


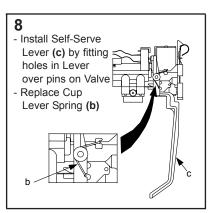

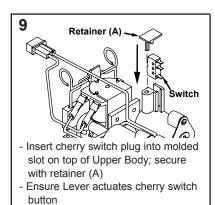

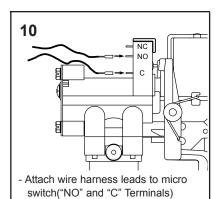

- Replace Bottom Plate and screws assuring the replacement of the pin - Install Diffuser Assembly & Nozzle - Install Valve on Mounting Block and latch Retainer - Reconnect wire harness - Turn both Valve stems to open
- position - Check for leaks - Install Cover & tighten retainer screw. - Install I.D. Panel (PN 05-0287/02)

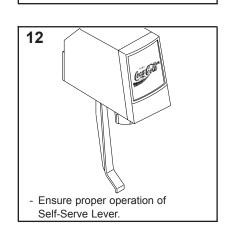

Check out the Lancer web site: www.lancercorp.com

