



The following illustrates how to remove the existing unit merchandiser and replace it with the new Video Merchandiser for the Sensation 44 unit.

Installing New Merchandiser Frame

1. Remove the merchandiser by disengaging the metal tabs from the bottom left and right sides.
2. Rotate the merchandiser away from the unit then lift the merchandiser straight up to detach from the top of the ice bin and remove from the unit.

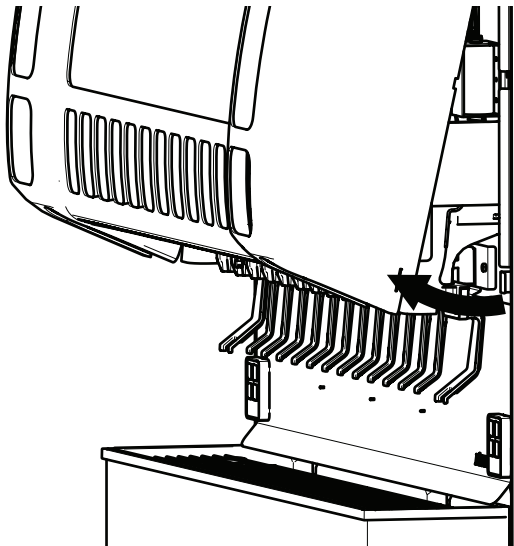


3. Remove the left and right connection tabs, used to connect the original merchandiser to the unit.

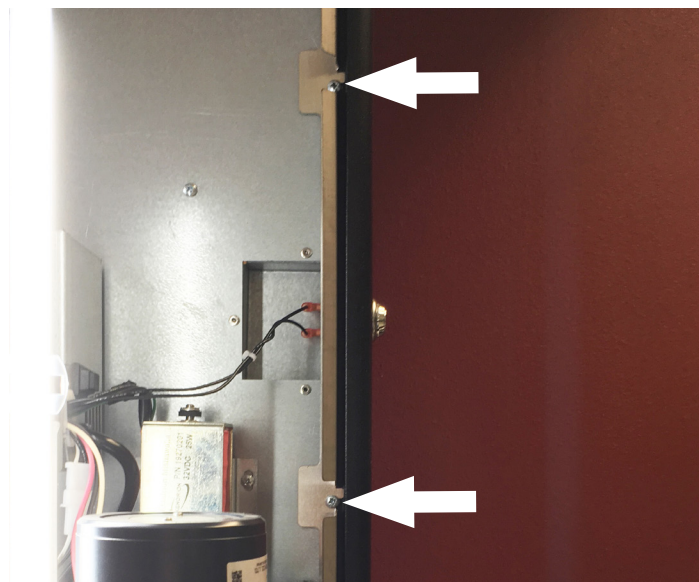

4. Remove the top screws on the outer edge of the dispenser from the left and right side of the unit.

5. Disconnect the three center LED light bars that will be behind the monitor, and detach from retaining clips.

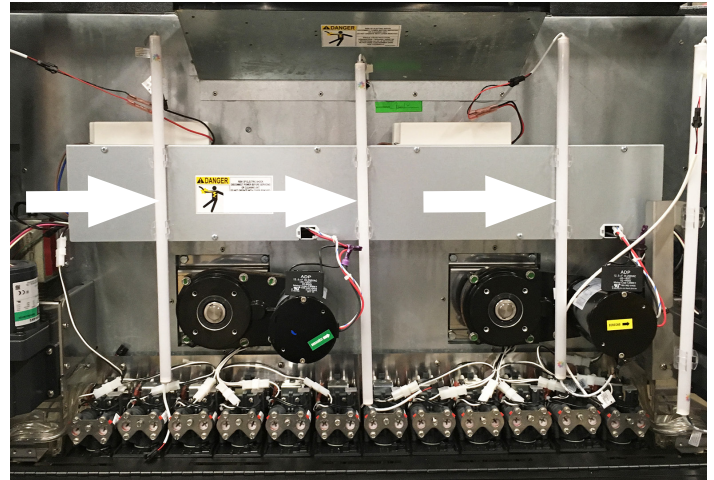



NOTE

Make sure remaining three LED light bars are all plugged into LED driver installed on manual fill chute.

6. Place the new merchandiser frame onto the unit and use the self-tapping screws included with kit and the screw holes created from Steps 3 - 4 to secure to the unit.

NOTE

When installing the new merchandiser frame, remove the monitor door from the frame in order to make installation of the frame easier.

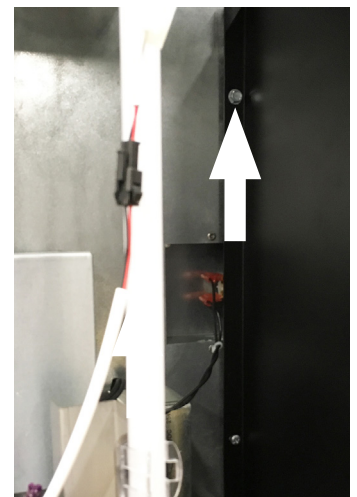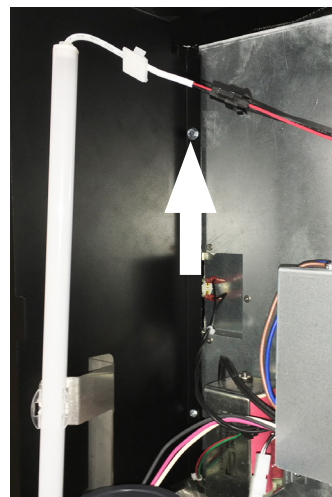


Installing Video Monitor

1. Remove the LG emblem on the back of the monitor by removing the screw behind the emblem.




2. Slide the top of the monitor into the top of the door frame then push bottom in to secure monitor. Fasten the decals and glass to door using the four (4) metal retaining clips.

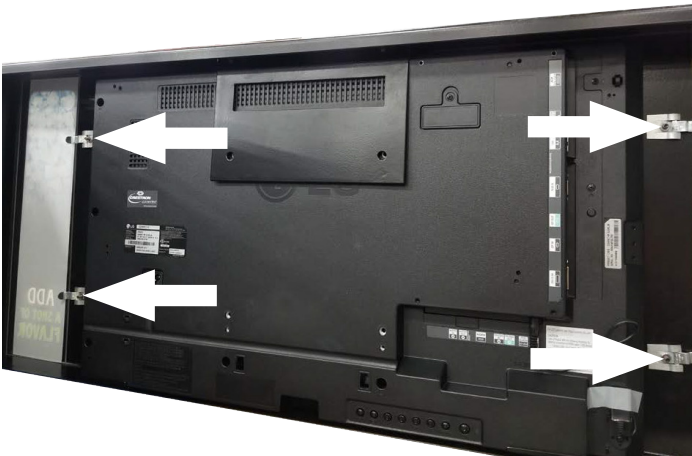

NOTE

The bottom of the monitor is held in place by metal channel clips in door frame.

3. Secure the monitor door frame to the back of the monitor using the screws and nuts included in kit.

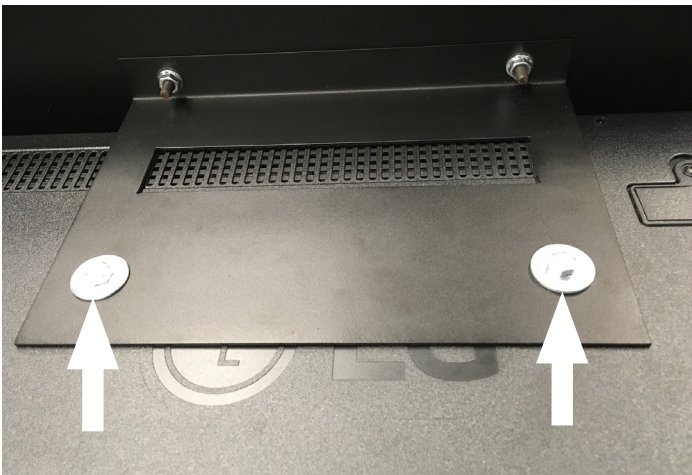


4. With the new monitor installed to the monitor door frame, re-install the monitor door to the merchandiser frame.
5. Run the monitor power cord down behind the valve plate and splash plate and route under the dispenser to a grounded electrical outlet. Plug the power cord into the back of the monitor.

NOTE

A grounded power strip may be required for monitor to reach a grounded electrical outlet.

6. Use a screwdriver to disconnect the monitor antenna from the back of the monitor.
7. Using the tape provided secure the antenna behind the plastic ice chute graphic to get a better signal and make it easier to use the remote.

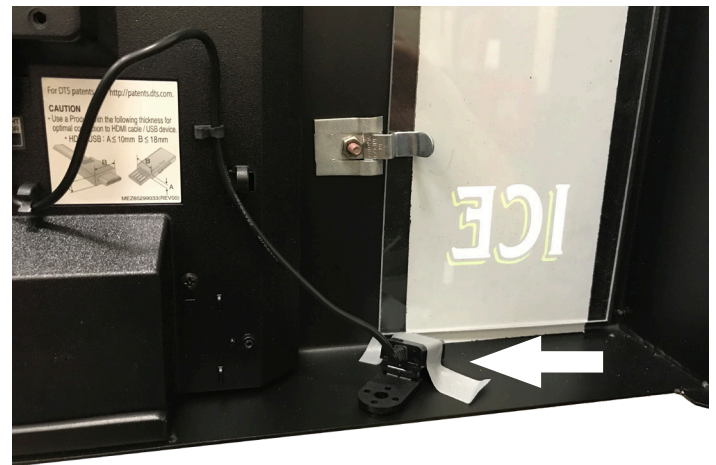

Uploading New Video Content

1. Using the key provided, unlock the Merchandiser Frame and open to gain access to the monitor.
2. Turn on the screen by pressing the power button on the remote provided.

NOTE

Aim the remote at the remote sensor at the left ice chute graphic for best accuracy.




3. Once the screen has turned on, press the “Home” icon button on the remote.
4. Use the arrows on the remote to navigate the Home screen, and select the “Player” menu from the bottom row of menu options.
5. Plug the USB drive, containing the video file to be loaded to the monitor, into the USB port on the top-left side of the monitor.

NOTE


Once plugged in, the screen should show the video file as well as the name of the USB, “Cruzer Glide”.

6. Use the remote to scroll to the “Export” icon, then press OK.

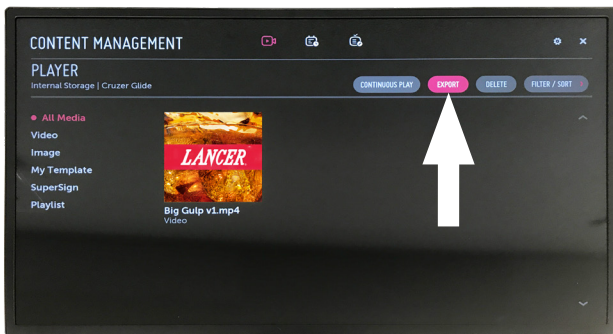

7. Press OK on the remote to select the video to be uploaded.
8. Use the remote to scroll to the “Copy” icon, then press OK.

9. Select the device “LG Signage Internal Storage” then select the “Select” icon and press OK on the remote.

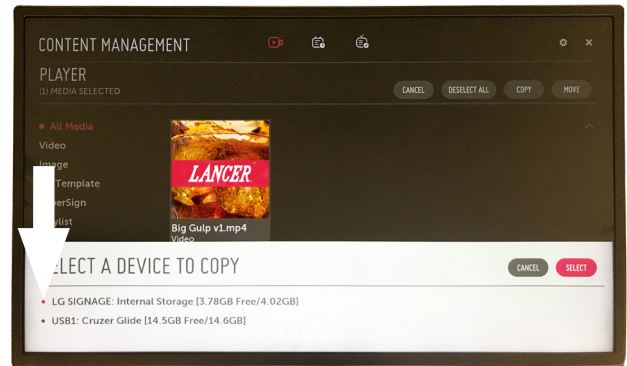

10. Select Yes on the “Single Item Selected. Copy Now?” menu and press OK on the remote to begin the copy.

NOTE


Once the copy function is complete, the screen should now show two (2) of the same video file.

11. Remove the USB drive from the side of the monitor.

NOTE

One of the video files on the screen should disappear after the USB drive is removed.

12. Use the remote to scroll to the “Continuous Play” icon, then press OK.

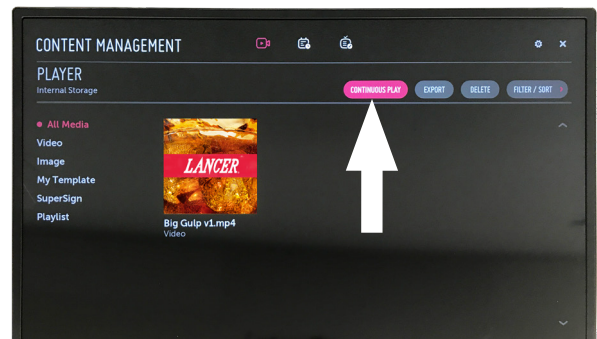

13. Select the video or videos you wish to play, then scroll the “Play” icon and press OK.
14. Select No from the “Do you want to save Media to Playlist?” menu then press OK.

NOTE


Video will begin to play on a continuous loop, press the back button to return to the menu.

15. Close the merchandiser frame and lock in place using the key provided.

Mvix Content Management Setup


Set up LG webOS display

1. On first boot, you will be greeted with a welcome screen and various additional steps (these may vary)

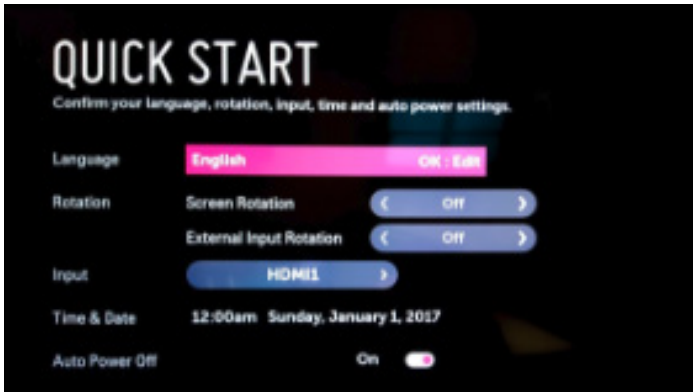

2. Select “Quick Start”, and **ensure sure the time and date are set correctly**.
3. Press the “Settings” ⚙️ button on the remote.
4. From the “General” section, select “Network”.
5. Select “Wi-Fi Connection”, and choose the desired network.
6. Enter the encryption key if necessary.

Install the Mvix Flex LG app

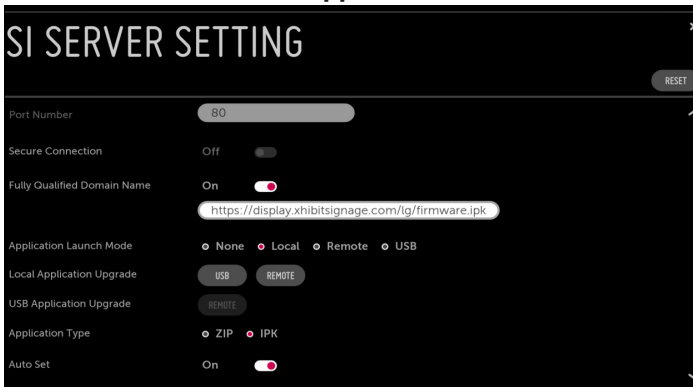


1. Press the “Settings” ⚙️ button on the remote.
2. From EZ Settings, select “SI Server Setting”.
3. If you see a prompt asking you to select “SI Server Setting” or “Developer Mode & Beanviser”, choose “SI Server Setting”.
4. Set “Fully Qualified Domain Name” to On, and in the text field underneath, enter:
“https://display.xhibitsignage.com/lg/firmware.ipk”

5. Set “Application Launch Mode” to “Local”.
6. Scroll down and set “Application Type” to “IPK”.
7. Next to “Local Application Upgrade”, select the “Remote” button, and then select “Confirm”.
8. Reboot the device, then wait and verify the application automatically loads.

Activate your device

1. Power on your WebOS device.
2. After the device boots, the Xhibit Flex app will automatically open, and you will be presented with the activation screen:

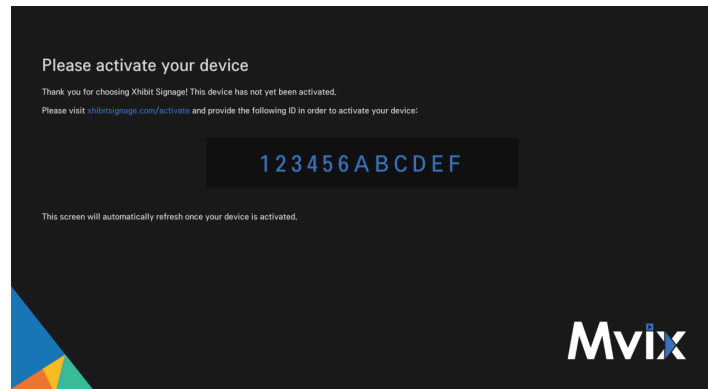

3. At this point, use another PC/Mac or mobile device and go to <https://www.xhibitsignage.com/activate> to complete the device activation form
4. The Mvix Technical Support team will review your activation details and set up your client account along with your device registration - this process is usually completed within 1 business day
5. Once your device is activated, the activation screen will disappear, and the device will begin playing Mvix sample content

Schedule Your Content

1. Your device setup is now complete, and you can access <https://www.xhibitsignage.com> using your account login credentials
2. Moving forward, you will use XhibitSignage to schedule and manage your devices and their playback content
3. Enjoy!

Lancer Worldwide, 6655 Lancer Blvd., San Antonio, Texas 78219 - 800-729-1500 - Technical Support/Warranty: 800-729-1550

custserv@lancerworldwide.com - lancerworldwide.com - Manual PN: 28-3053 Rev: 00-0 - March 2020

“Lancer” and “Lancer Worldwide” are the registered trademarks of Lancer © 2020 by Lancer, all rights reserved.