

INSTRUCTION SHEET

FOR DECO-RIM SEALANT INSTALLATION

BACKGROUND:

To ensure a secure seal between the counter and the deco-rim, all Lancer drop-ins will ship with a 10' roll of a putty-like extruded sealant material (**Lancer PN 15-0213**) to be applied in the manner detailed below.

- Each 1522 dispenser requires approximately 6 feet of sealant
- Each 2323 dispenser requires approximately 8 feet of sealant
- Each 3023 dispenser requires approximately 9 feet of sealant

1. The sealant should be placed around the underside of the deco-rim on the dispenser(see Figure 1). Peel away the protective tape from the sealant.

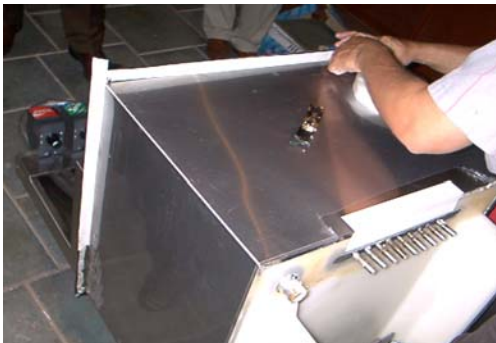


Figure 1



Figure 2

2. Set the dispenser into the opening (see Figure 2).

A. Initially, the deco rim will be held slightly above the counter by the sealant. Before the sealant flattens, apply a bead of silicone around and under the deco rim edge.

Note: As the sealant flattens, the dispenser will also flatten the silicone. This should create a very good seal and prevent any water from getting under the deco rim.

3. Wipe the excess silicone off after the dispenser has settled flush with the counter. (Note: Health inspectors require the silicone seal)

LANCER

6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000

FAX SALES

• NORTH AMERICA – 210-310-7245 • INTERNATIONAL SALES – 210-310-7242 • CUSTOMER SERVICE – 210-310-7242 •
• LATIN AMERICA – 210-310-7245 • EUROPE – 32-2-755-2399 • PACIFIC – 61-8-8268-1978 •

• FAX ENGINEERING: • 210-310-7096 •

• "Lancer" is the registered trademark of Lancer •
• Copyright — 2006 by Lancer, all rights reserved •

DATE:	07/28/07
P.N.	28-0719