




LANCER INSTALLATION SHEET FLAVORSELECT 60 LEG & BRACKET KIT

BRACKET, LEFT
PN 30-11124
QTY 1

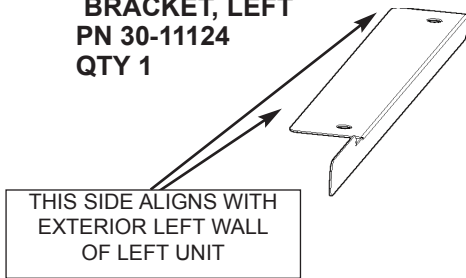

LEGS
PN 81-0628
QTY 8

BRACKET, RIGHT
PN 30-11123
QTY 1

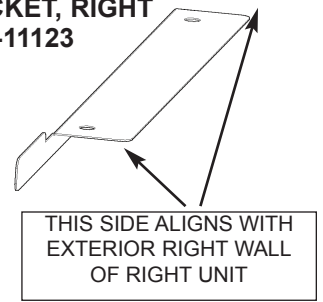

⚠ WARNING ⚠

TO AVOID INJURY OR DAMAGE TO THE UNITS, IT IS RECOMMENDED THAT A MECHANICAL LIFT IS UTILIZED FOR PROPER INSTALLATION AND A MINIMUM OF TWO (2) INSTALLERS ARE REQUIRED. ALWAYS USE PROPER LIFTING TECHNIQUES.

NOTE: LEGS SHOULD BE INSTALLED FOLLOWING THE MANUFACTURERS INSTRUCTIONS FOR RECEIVING, UNPACKING, AND SELECTING PROPER LOCATION.

OVERVIEW

1. Set both dispensers on the counter. Align side-by-side and approximately one (1) inch apart (Fig 1).
2. Two Brackets will be installed
 - A. The LEFT BRACKET will be installed on the far left side of the LEFT unit (Fig 1A).
 - B. The RIGHT BRACKET will be installed on the far right side of the RIGHT unit (Fig 1B).

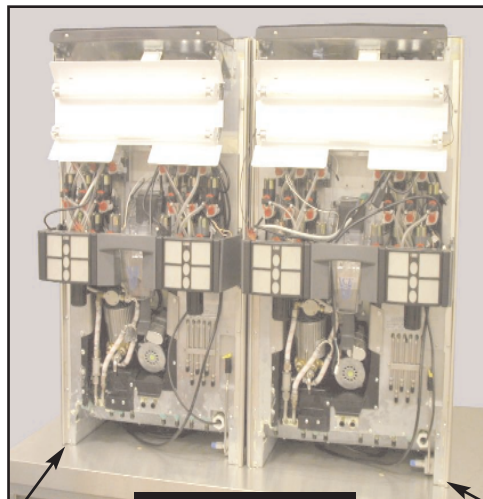


Figure 1


A. LEFT BRACKET
HERE

B. RIGHT BRACKET
HERE

STEP 1 - INSTALL THE LEFT BRACKET

- A. Carefully tilt the LEFT dispenser back to properly align the LEFT BRACKET (Fig 2) with the threaded leg hole underneath the dispenser on the FAR LEFT of the unit.
- B. Secure the bracket to the dispenser using the threaded stud of one leg (#1).
- C. Repeat to secure the other end of the bracket to the dispenser, using the threaded stud of a second leg (Leg #2).
- D. Next, insert two of the remaining legs (#3 & #4) into the threaded holes, located underneath the dispenser. Use Fig 2 - Steps D & E for reference.


Figure 2 - Left Bracket

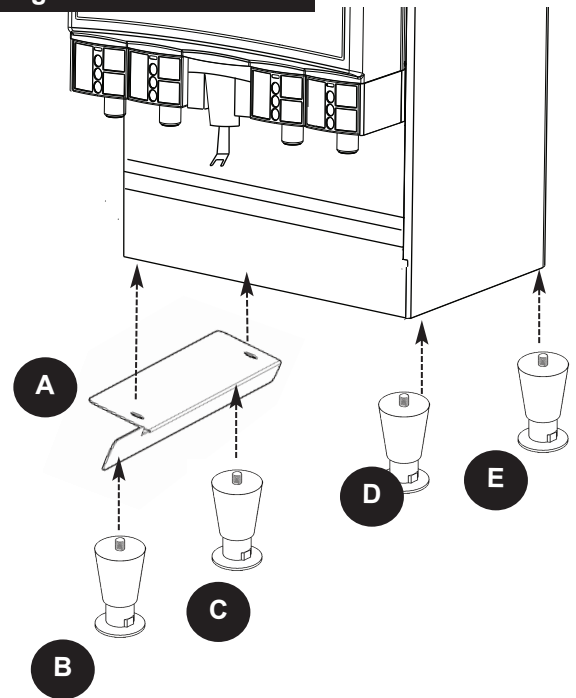

STEP 2 - INSTALL THE RIGHT BRACKET

- A. Carefully tilt the right dispenser back to properly align the RIGHT BRACKET (Fig 3) with the threaded leg hole underneath the dispenser on the FAR RIGHT of the unit.
- B. Secure the bracket to the dispenser using the threaded stud of one leg (#5).
- C. Repeat to secure the other end of the bracket to the dispenser, using the threaded stud of a second leg (Leg #6).
- D. Next, insert two of the remaining legs (#7 & #8) into the threaded holes, located underneath the dispenser. Use Fig 3 - Steps D & E for reference.

Figure 3 - Right Bracket

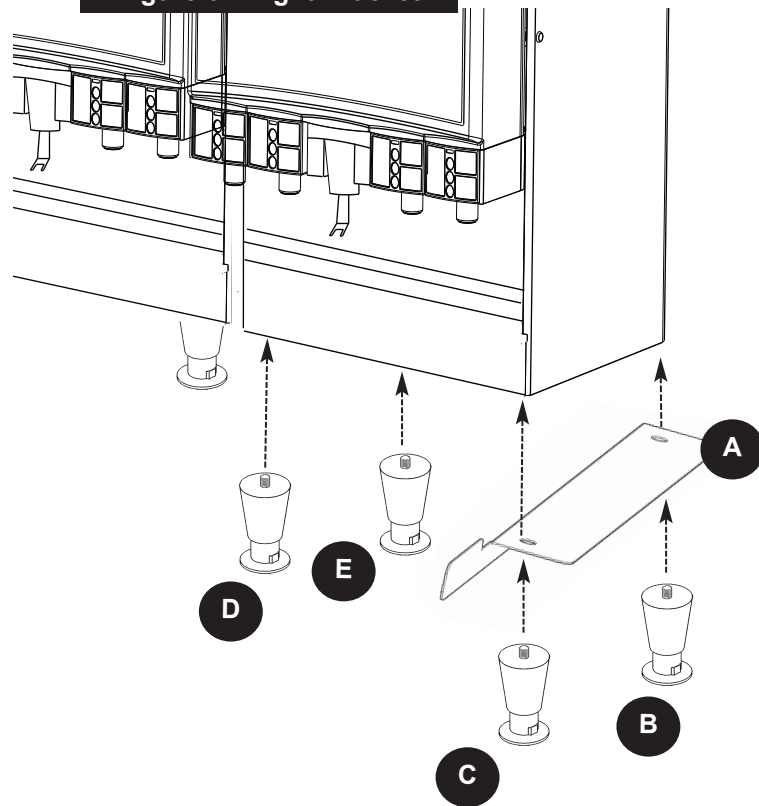

STEP 3 - PROCEED WITH THE INSTALLATION PROCESS IN THE MANUFACTURER'S INSTALLATION MANUAL.