
## INSTALLATION INSTRUCTIONS

## SPLASH GUARD KIT (8000 COLD CARBONATED DISPENSER)

- 1. This Instruction applies to the installation of splash guards to the left and right sides of the 8000 Cold Carbonated Dispenser.
  - Facing the dispenser, remove the cup rest. 1.1
  - 1.2 Place the left splash guard into position over the far left valve (see illustration). Make sure the tab (see bottom of splash guard in illustration) on the bottom fits into the groove in the drip tray. Carefully, slide splash guard into position.
  - Install right splash guard (as shown in the illustration) by repeating Step 2. 1.3
  - 1.4 Reinstall cup rest to the dispenser.

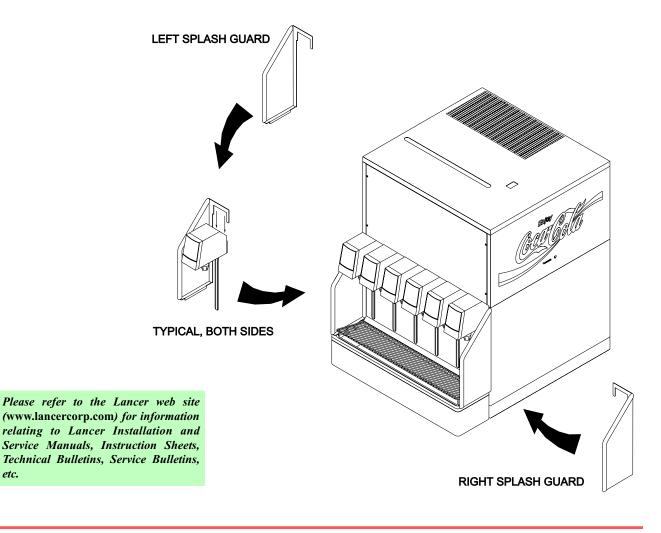



etc.

6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000

FAX SALES

• NORTH AMERICA - 210-310-7245 • INTERNATIONAL SALES - 210-310-7242 • CUSTOMER SERVICE - 210-310-7242 • • LATIN AMERICA - 210-524-9567 / 210-310-7245 • EUROPE - 32-2-755-2399 • PACIFIC - 61-8-8268-1978 •

> DATE: 10/10/96 P.N.: 28-0649

FAX ENGINEERING: • 210-310-7096 "Lancer" is the registered trademark of Lancer • Copyright — 1996 by Lancer, all rights reserved.