


The following illustrates how install the drain elbow fitting to any existing IBD dispenser for the purpose of eliminating “wicking” which may occur on the drain tubes of dispensers that are now completely level.



Lancer PN
05-2771

Installing Drain Elbow Fitting

1. Remove the cup rest.
3. Clean area around drain tubes.

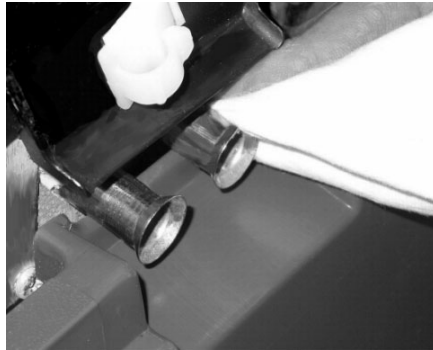

2. Remove the splash plate.



4. Slightly pinch the elbow fitting to form an oval shape.




The following illustrates how install the drain elbow fitting to any existing IBD dispenser for the purpose of eliminating “wicking” which may occur on the drain tubes of dispensers that are now completely level.



Lancer PN
05-2771

Installing Drain Elbow Fitting

1. Remove the cup rest.
3. Clean area around drain tubes.

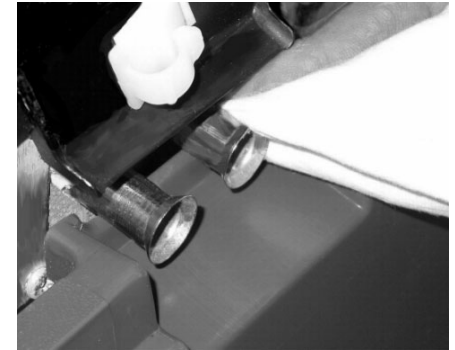


2. Remove the splash plate.




4. Slightly pinch the elbow fitting to form an oval shape.




5. Slide the elbow fitting over the flared end of the drain tube.

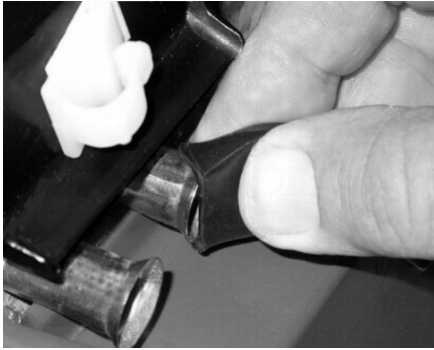


7. Rotate the elbow fitting so that the exhaust points downward.

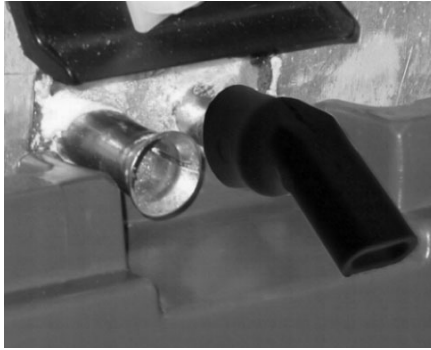

6. Push the elbow fitting back over the drain tube until flare reaches the angle point.

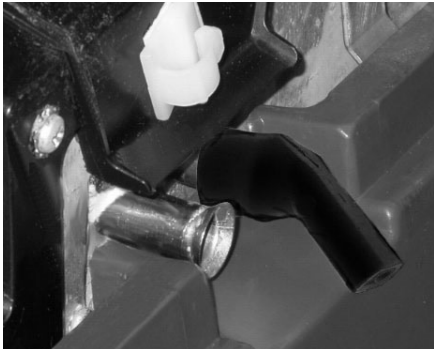

8. Install the second elbow fitting onto the open drain tube.

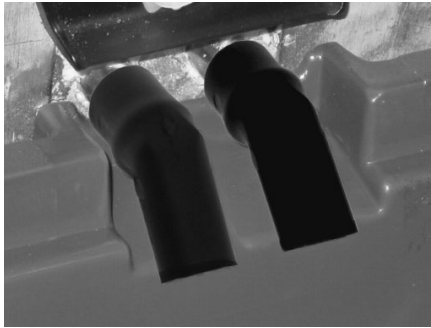


9. Re-install splash plate and cup rest.

NOTE

After installing the elbow fitting, there may be minor condensation on the rubber boot, but this is normal and does not indicate an issue.


5. Slide the elbow fitting over the flared end of the drain tube.

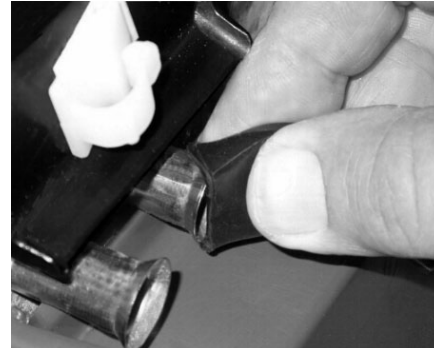


7. Rotate the elbow fitting so that the exhaust points downward.



6. Push the elbow fitting back over the drain tube until flare reaches the angle point.

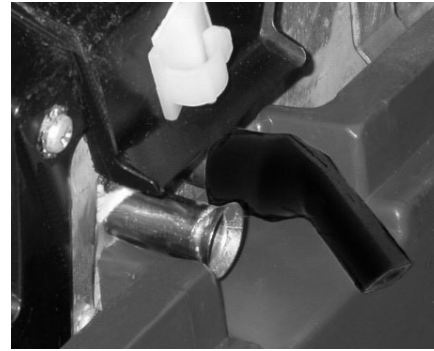

8. Install the second elbow fitting onto the open drain tube.

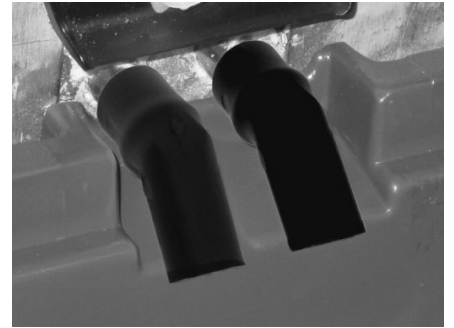

9. Re-install splash plate and cup rest.

NOTE

After installing the elbow fitting, there may be minor condensation on the rubber boot, but this is normal and does not indicate an issue.