

Drip Tray Drain Strainer Kit - CCICDI

Instruction Sheet - PN 28-1000

The following illustrates the steps necessary to install a drain strainer to Lancer Cold Carbonated Ice Cooled Drop-In Dispensers, in order to reduce the chance of clogging the drain.

Kit Instructions - 82-5268

1. Remove the cup rest from the top of the unit drip tray.



2. Position the drain strainer, with teeth up, around the outer edge of the corner drain as shown below:



LANCER.

Drip Tray Drain Strainer Kit - CCICDI

Instruction Sheet - PN 28-1000


The following illustrates the steps necessary to install a drain strainer to Lancer Cold Carbonated Ice Cooled Drop-In Dispensers, in order to reduce the chance of clogging the drain.

Kit Instructions - 82-5268

1. Remove the cup rest from the top of the unit drip tray.



2. Position the drain strainer, with teeth up, around the outer edge of the corner drain as shown below:

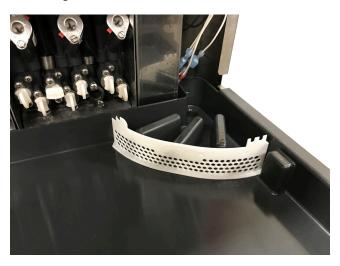

3. Re-install cup rest over drip tray strainer. Make sure the bars of the cup rest are secured in the teeth of the drip tray strainer.



Lancer Corp., 6655 Lancer Blvd., San Antonio, Texas 78219 - 800-729-1500 - Technical Support/Warranty: 800-729-1550 custserv@lancercorp.com - lancercorp.com - Manual PN: 28-1000 - October 2017 "Lancer" is the registered trademark of Lancer © 2017 by Lancer, all rights reserved.

3. Re-install cup rest over drip tray strainer. Make sure the bars of the cup rest are secured in the teeth of the drip tray strainer.



Lancer Corp., 6655 Lancer Blvd., San Antonio, Texas 78219 - 800-729-1500 - Technical Support/Warranty: 800-729-1550 custserv@lancercorp.com - lancercorp.com - Manual PN: 28-1000 - October 2017 "Lancer" is the registered trademark of Lancer © 2017 by Lancer, all rights reserved.