

The following illustrates how to install the bracket retainer to FS and IBD 4500 dispensers that utilize a pellet ice dispenser.

Installation

1. Turn off power to ice maker and FS/IBD dispenser.
2. Carefully slide ice maker towards rear of dispenser to expose the gasket (see Figure 1).
3. Carefully lift gasket up as shown in Figures 2 and 3.
4. Carefully slide the bracket into dispenser, between the liner and the shroud (see Figure 4). Ensure that the lower edge of the bracket inserts properly inside the shroud (see Detail A, Figure 4).
5. Reinstall gasket.
6. Carefully slide ice maker back to its original position on the dispenser (see Figure 5).
7. Restore power to icemaker and dispenser.

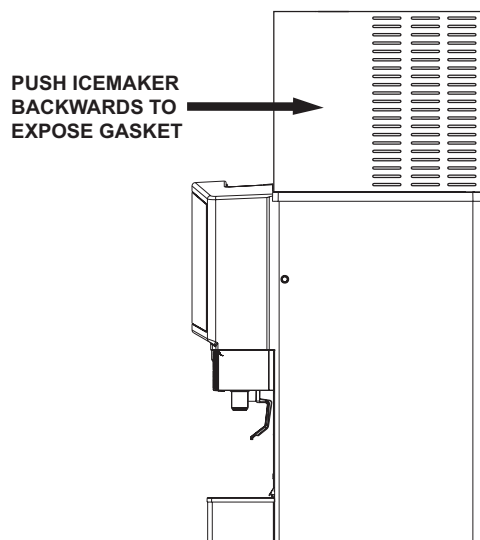


FIGURE 1

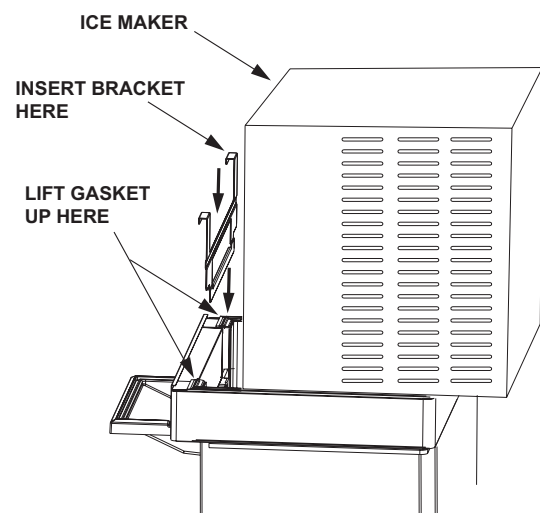


FIGURE 2

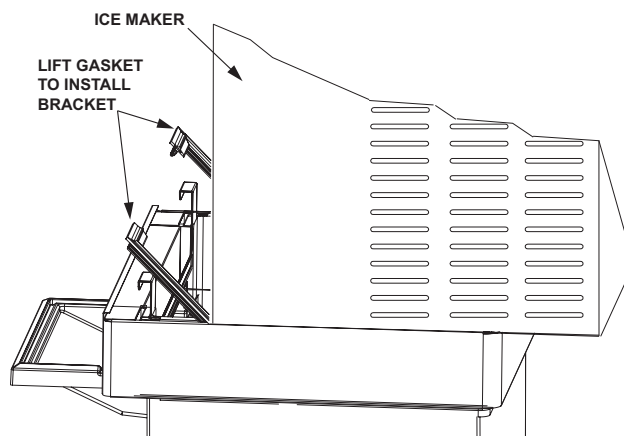


FIGURE 3

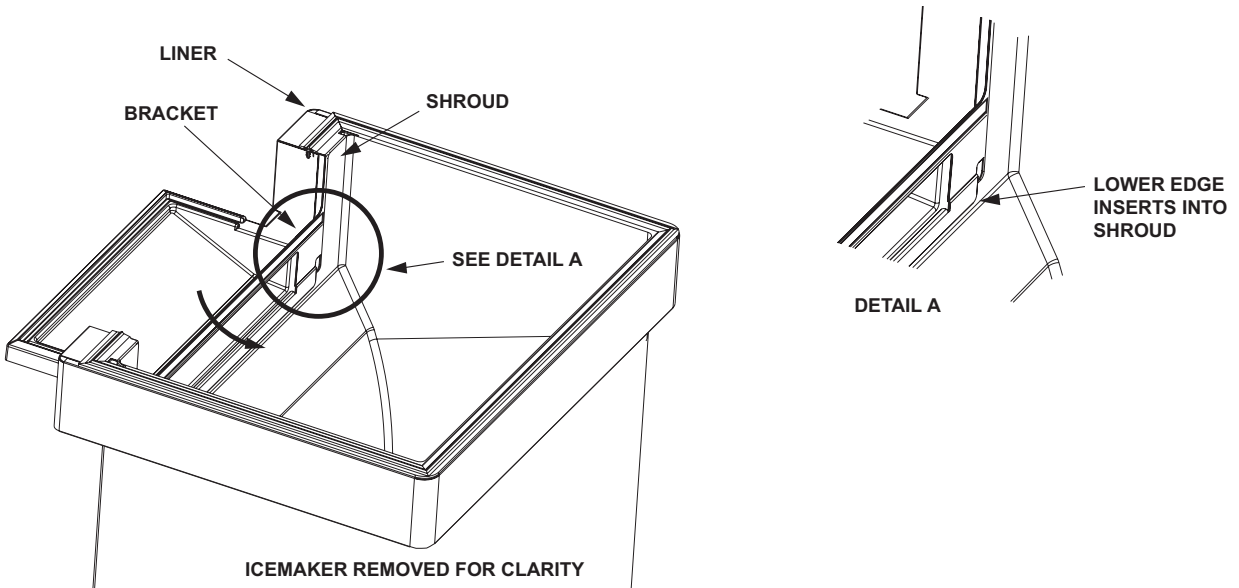


FIGURE 4

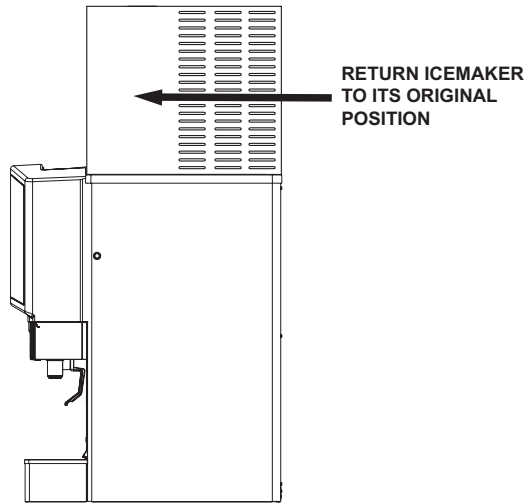


FIGURE 5