PRE/POST ICE CHUTE OPTICS INSTALLATION INSTRUCTIONS:

1. **PRE:** Prior to removing the existing Printed Circuit Board (PCB) connect the Palm Pilot to the PCB. Launch the Palm Pilot FS -18 SERVICE TOOL and record the information in the grey fill boxes shown on the diagrams.


NOTE: If an option does not have a grey fill box it is a mandatory setting and its value must be set on the new PCB as indicated in this instruction sheet.

2. **POST:** After installing the new PCB connect the Palm Pilot to the PCB. Launch the Palm Pilot FS-18 SERVICE TOOL and enter the recorded information from the grey fill boxes and mandatory settings. When complete e ach menu screen should match the information contained on the instruction sheet.


MAIN MENU:



ICE MENU:

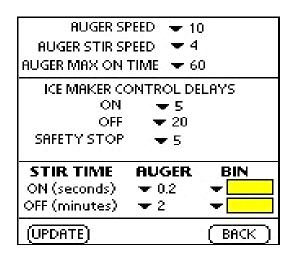

DISPENSER MENU:

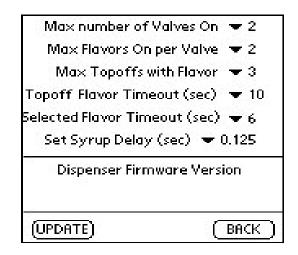



6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000 FAX SALES

• NORTH AMERICA – 210-310-7245 • INTERNATIONAL SALES – 210-310-7242 • CUSTOMER SERVICE – 210-310-7242 • LATIN AMERICA – 210-310-7245 • EUROPE – 32-2-755-2399 • PACIFIC – 61-8-8268-1978 •

• FAX ENGINEERING: • 210-310-7096 •

• "Lancer" is the registered trademark of Lancer •

• Copyright — 2006 by Lancer, all rights reserved •

DATE: 03/29/07 P.N. 28-0718

VALVE MENUS:

