



COCA-COLA EQUIPMENT INSTALLATION AND CLOSE-OUT

OPERATING INSTRUCTIONS

- PLEASE REVIEW THE CHIPOTLE COCA-COLA INSTALLATION GUIDELINES, AVAILABLE ON THE COCA-COLA CONNECTION PRIOR TO INSTALLATION
- PLEASE CHECK-IN WITH THE SITE SUPERVISOR WHEN ARRIVING AND PRIOR TO LEAVING THE SITE
- KEEP THE SITE SUPERVISOR INFORMED OF THE INSTALLATION PROGRESS AND TIMELINES
- RETURN THIS FORM VIA FAX TO ENSURE WORK ORDER IS PROPERLY CLOSED OUT

STORE#		WORK ORDER#	
STREET:		SERVICE PROVIDER CODE:	
CITY/STATE:		SITE SUPER NAME:	

CLOSE-OUT CHECKLIST

- ☐ The standard Chipotle equipment package includes a Lancer 4500 8V stainless dispenser (without standard merchandiser). Please check the stainless panel, and the body of the dispenser for any damage. Please report any equipment damage immediately to Zainab Turay at 404-887-3598
- ☐ **Secured the dispenser to the counter with the four bolts and washers (supplied).** The bolts screw into the same leg threads on the four corners of the dispenser (**Review back page for details**)
- ☐ Cleaned excess silicone off the counter to present a neat appearance
- ☐ 14-line bundle tubing (CCP# 14212) utilized for this installation
- ☐ Bundle configured as follows: 1/2" lines in the bundle for water/soda (one carbonated, and one plain water); 8 lines for syrup; and 4 spare lines
- ☐ Cap or plug spare tubing 2" - 3" past the point where the protective plastic sheath has been stripped
- ☐ Used newspaper to block the chase approx. 4" from the top. Sealed open ends of the chase with foam
- ☐ If the incoming water pressure is above 75 psi, install a water pressure regulator (CCUSA Part # 16065) on each water source and set at 65 psi
- ☐ Insulated all of the drain lines to avoid condensation
- ☐ Indicate brand line-up information below (left to right valve arrangement):

--	--	--	--

--	--	--	--

TECH NAME: _____ (PRINT)


DATE: _____

FAX (THIS SIDE UP) TO ZAINAB TURAY @ 404-253-4858



DISPENSER TO COUNTER BOLT DOWN INSTRUCTIONS

1. The counter comes pre-drilled with four holes that align with the leg threads in the bottom of the dispenser

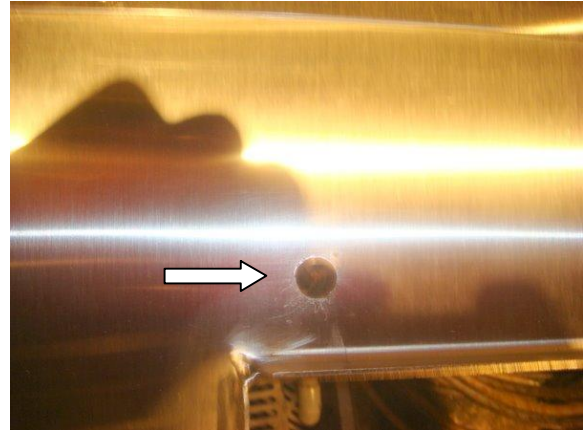

2. Position the dispenser on the counter to align holes with leg threads



3. Insert four (3/8" – 16UNC, 2" Length) bolts and washers through the underside of the counter to secure the dispenser to the counter



4. Apply a bead of silicone around the mating surfaces of the dispenser to counter and clean any excess to present a neat appearance

FAX (OTHER SIDE UP) TO ZAINAB TURAY @ 404-253-4858